



**CHART HOLDER ASSEMBLY
INSTALLATION INSTRUCTIONS
PACE PART NUMBER 1257-0186-P1
MANUAL NUMBER 5050-0345 REV.B**



Perform the following procedure to properly install the Chart Holder Assembly. Use the illustrations as a guide.

Packing Contents

PART NUMBER	DESCRIPTION	QUANTITY
1257-0186	Chart Holder	1
1405-0398-02	Screw, 6-32 x .31" Long	2
1410-0088	Hex Nut, 6-32	2

1. Check the enclosed parts with the parts list to insure that you have all the required parts. Use the following instructions and illustrations for assembly of Cleaning Station.

2. Install the Chart Holder Assembly to the top, rear of the system Power Source using the supplied Screws and Hex Nuts. Refer to the illustration below.

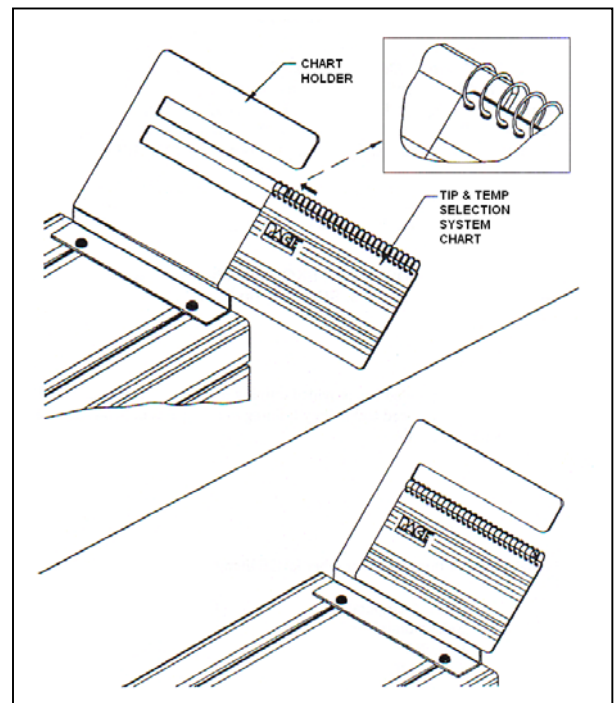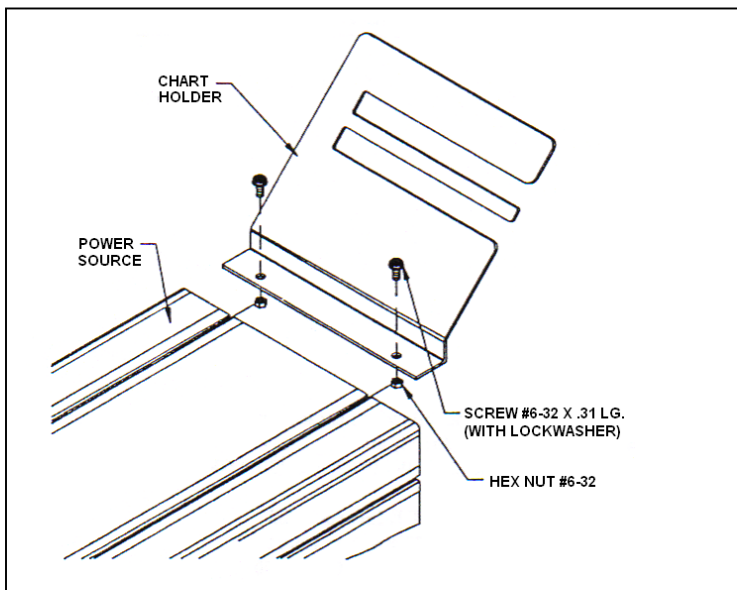

3. Install the Tip & Temperature Selection System Charts (in booklet form) onto the Chart Holder Assembly by sliding the metal spiral ring which binds the charts onto the metal finger of the Chart Holder Assembly. Refer to the illustration to the right.



PACE Incorporated
9030 Junction Drive
Annapolis Junction,
MD 20701
Tel: (301) 490-9860
Fax: (301) 498-3252

PACE Europe Limited
13 Tanners Drive
Blakelands
Milton Keynes
Tel: (44) 1908-277666
Fax: (44) 1908-277777