



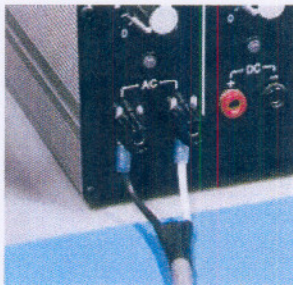

Operation Instruction for the
Thermal Wire Stripper CT-15
PACE PART NUMBER 7020-0001
MANUAL NUMBER 5050-0045 Rev. A

Part Identification


1. Molded Handle Assembly
2. Connector Rods
3. Tips-Conducting Heating
4. Tip-retaining Screws FIL HD 2-56 UNC x 9/64" LG

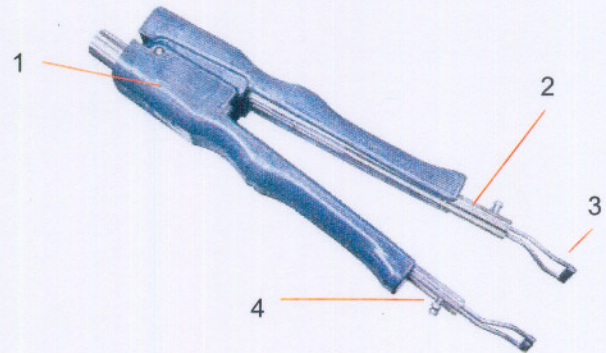


1. Connect High Current Power connectors to PRC2000 front panel.



2. Attach handpiece to Universal Connector.

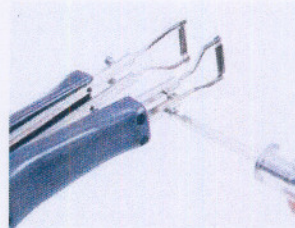

3. Insert handpiece tips and tighten tip-retaining screws.

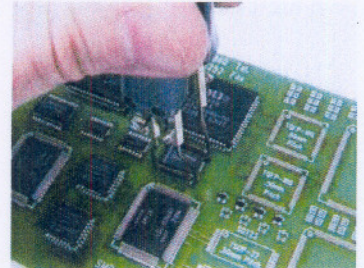

4. Gently grip component with tweezers. Depress foot switch to activate.

Maintenance and Trouble Shooting

1. Keep the tip clean. Use abrasive paper and solvent.
2. No power at low voltage A.C.?
 - a. Is main Power Cord connected to an operational outlet?
 - b. Check Pulse Heat Control outlet?
 - c. Still no power? Check Pulse Heat Temperature Controller. Replace if necessary.

Operation Instructions

1. Start cool on unfamiliar materials.
2. Tips are always in contact with work before heating.
3. Increase heat a little at a time.
4. Pulse the foot switch for heat fine control.
5. Watch for damage indicators. (Discoloration, scorching, smoke).
6. Stop heat before damage occurs.
7. Try to set-up on scrap to get a feel for the material.
8. For operator safety and to prevent tip damage, always turn control dial knob to OFF position before connecting tool.
9. Fume extraction is recommended.



PACE Incorporated
9030 Junction Drive
Annapolis Junction,
MD 20701
Tel: (301) 490-9860
Fax: (301) 498-3252

PACE Europe Limited
13 Tanners Drive
Blakelands
Milton Keynes
Tel: (44) 1908-277666
Fax: (44) 1908-277777